

**Инструкция по сборке
E8112.0000.0000**

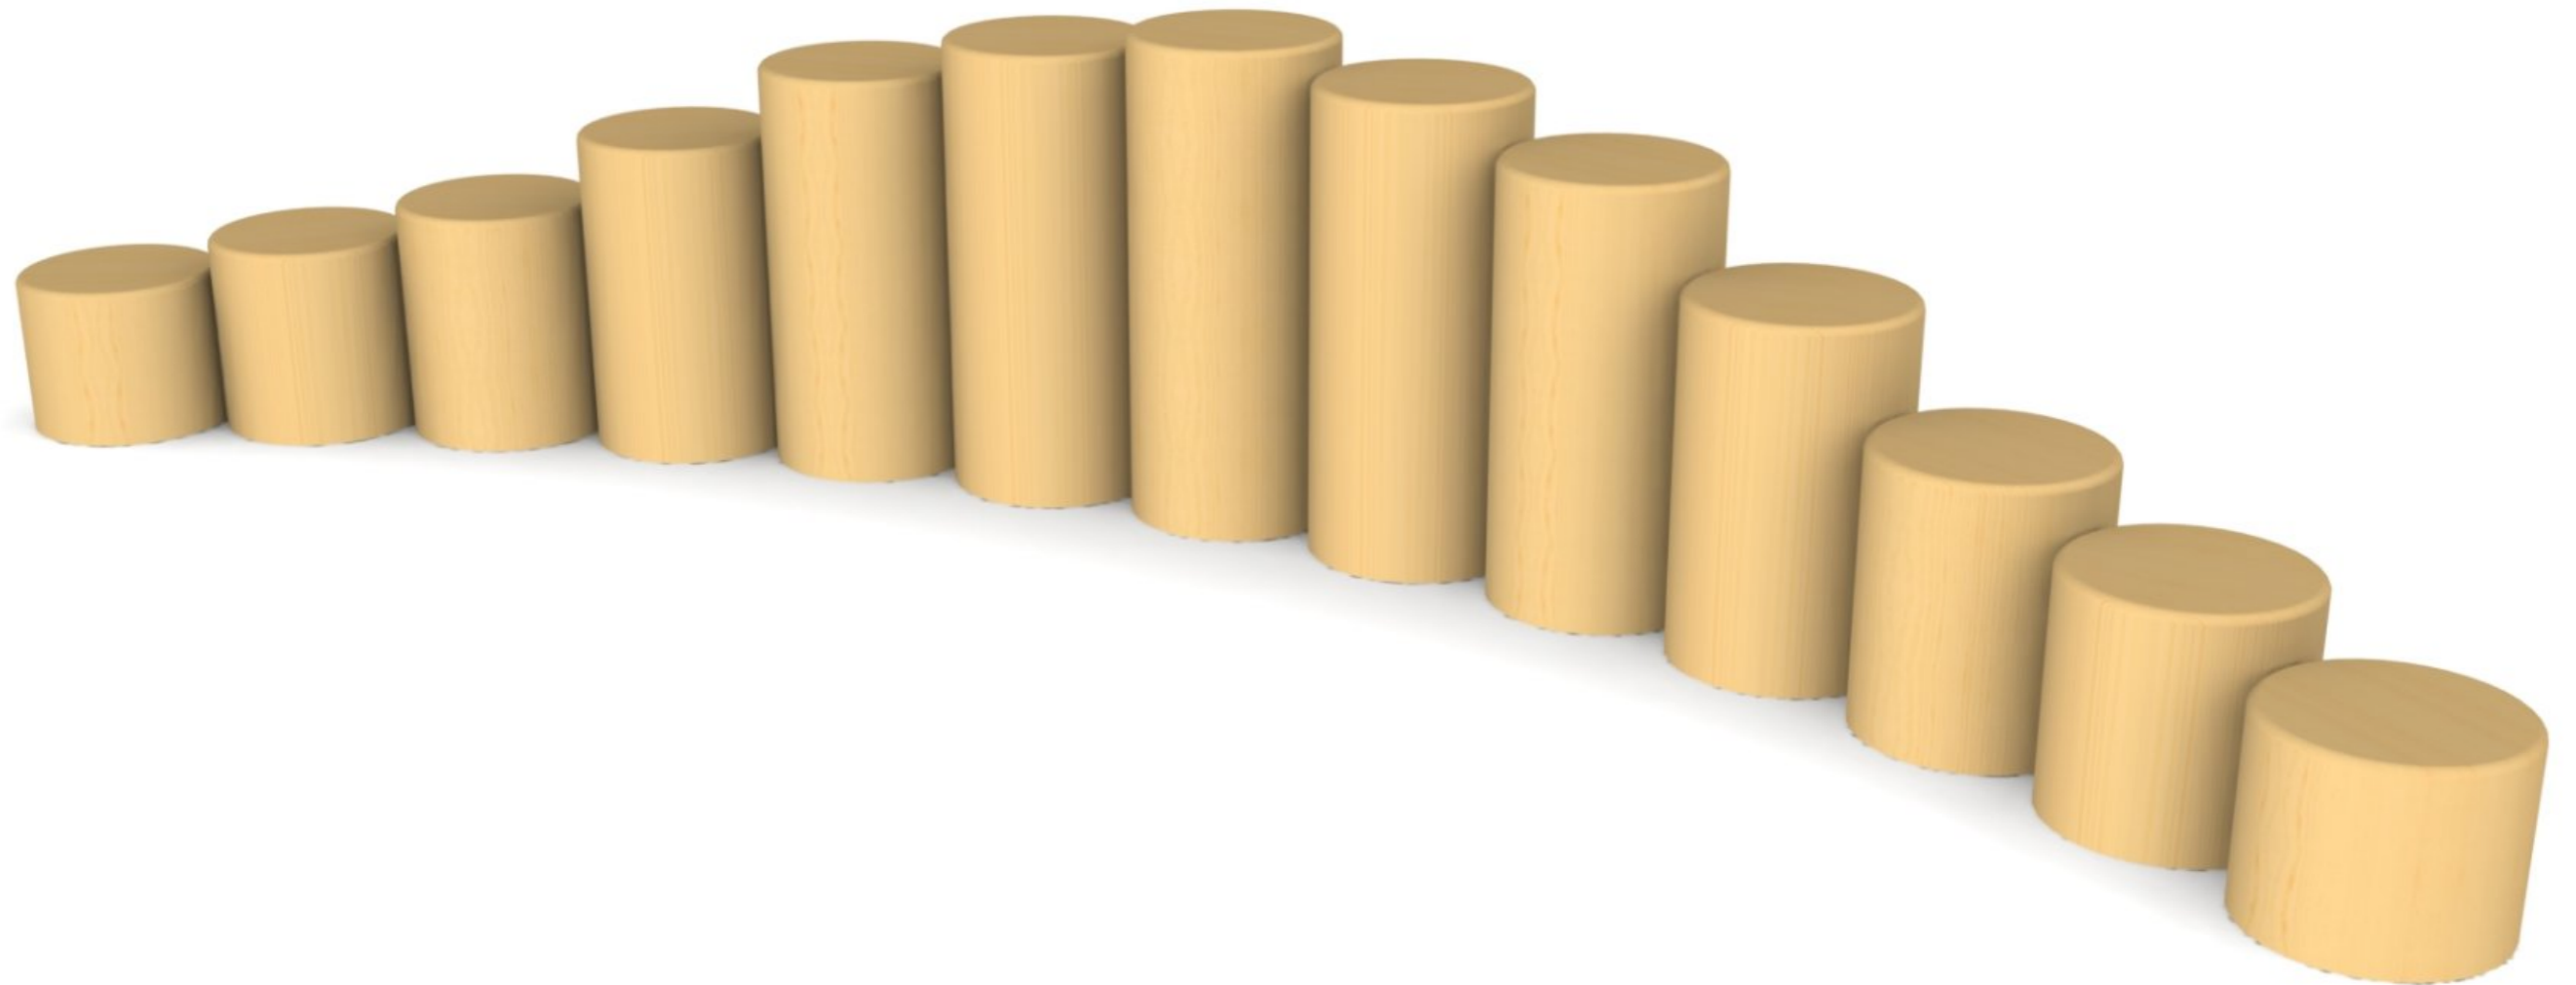




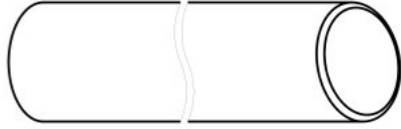











Таблица 1 — Составные части оборудования

 <p>E8112.0000.S027 — 1 шт</p>	 <p>E8112.0000.S028 — 1 шт</p>	 <p>E8112.0000.S029 — 1 шт</p>	 <p>E8112.0000.S030 — 1 шт</p>	 <p>E8112.0000.S031 — 1 шт</p>
 <p>E8112.0000.S032 — 1 шт</p>	 <p>E8112.0000.S033 — 1 шт</p>	 <p>E8112.0000.S034 — 1 шт</p>	 <p>E8112.0000.S035 — 1 шт</p>	 <p>E8112.0000.S036 — 1 шт</p>
 <p>E8112.0000.S037 — 1 шт</p>	 <p>E8112.0000.S038 — 1 шт</p>	 <p>E8112.0000.S039 — 1 шт</p>	 <p>SH12.100.D571 (Винт самонар., с шестигр. головкой, 12×100, DIN 571) — 39 шт</p>	

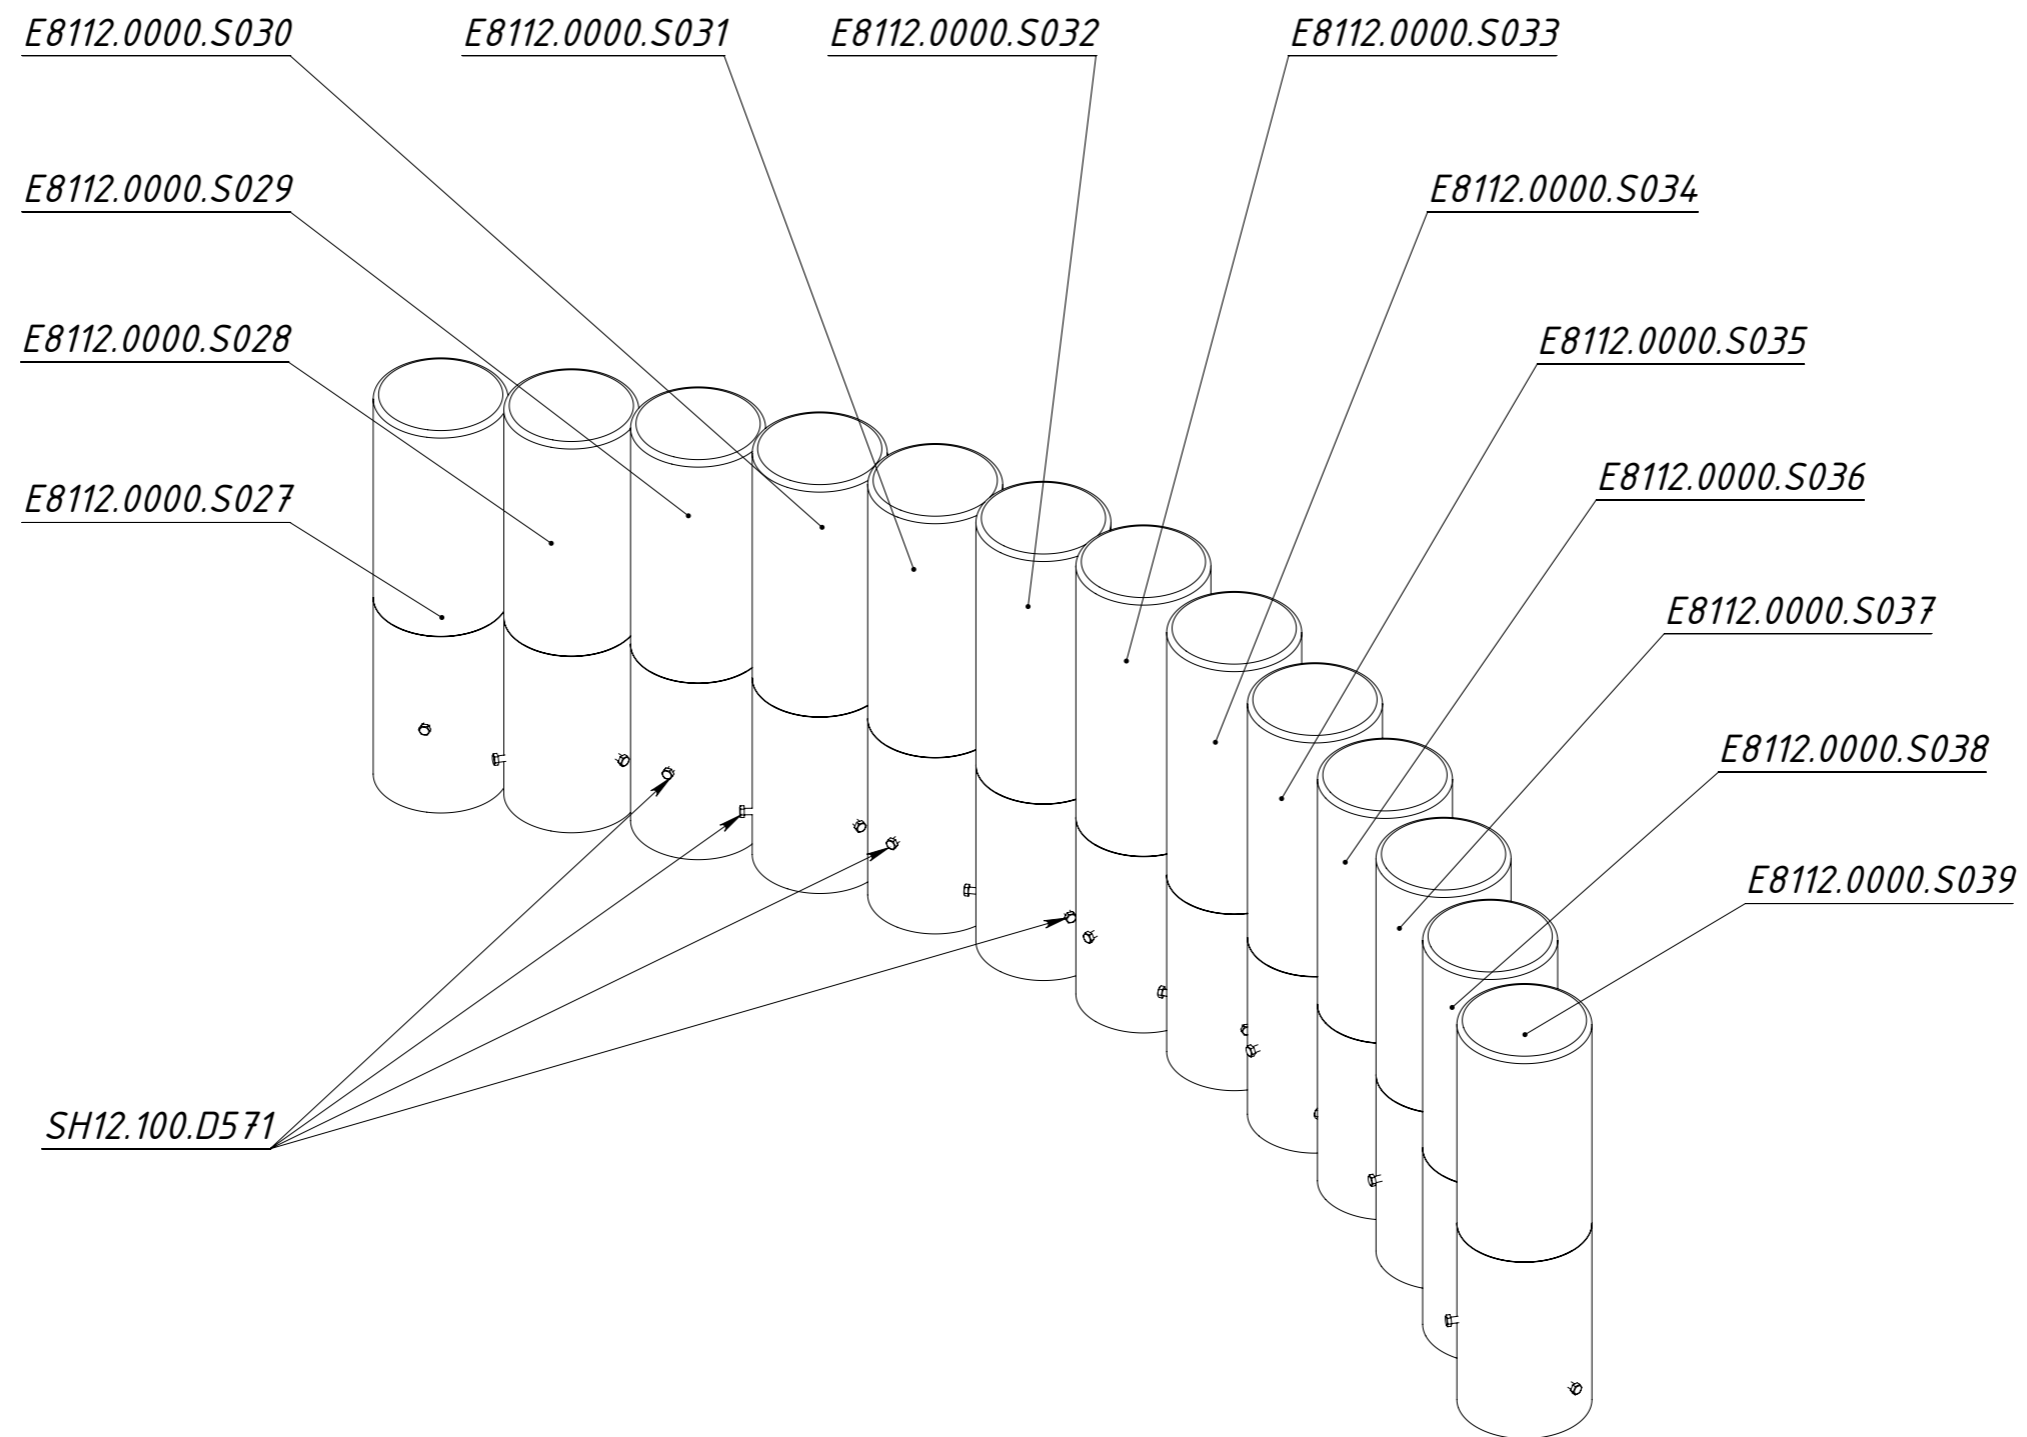


Рисунок 1

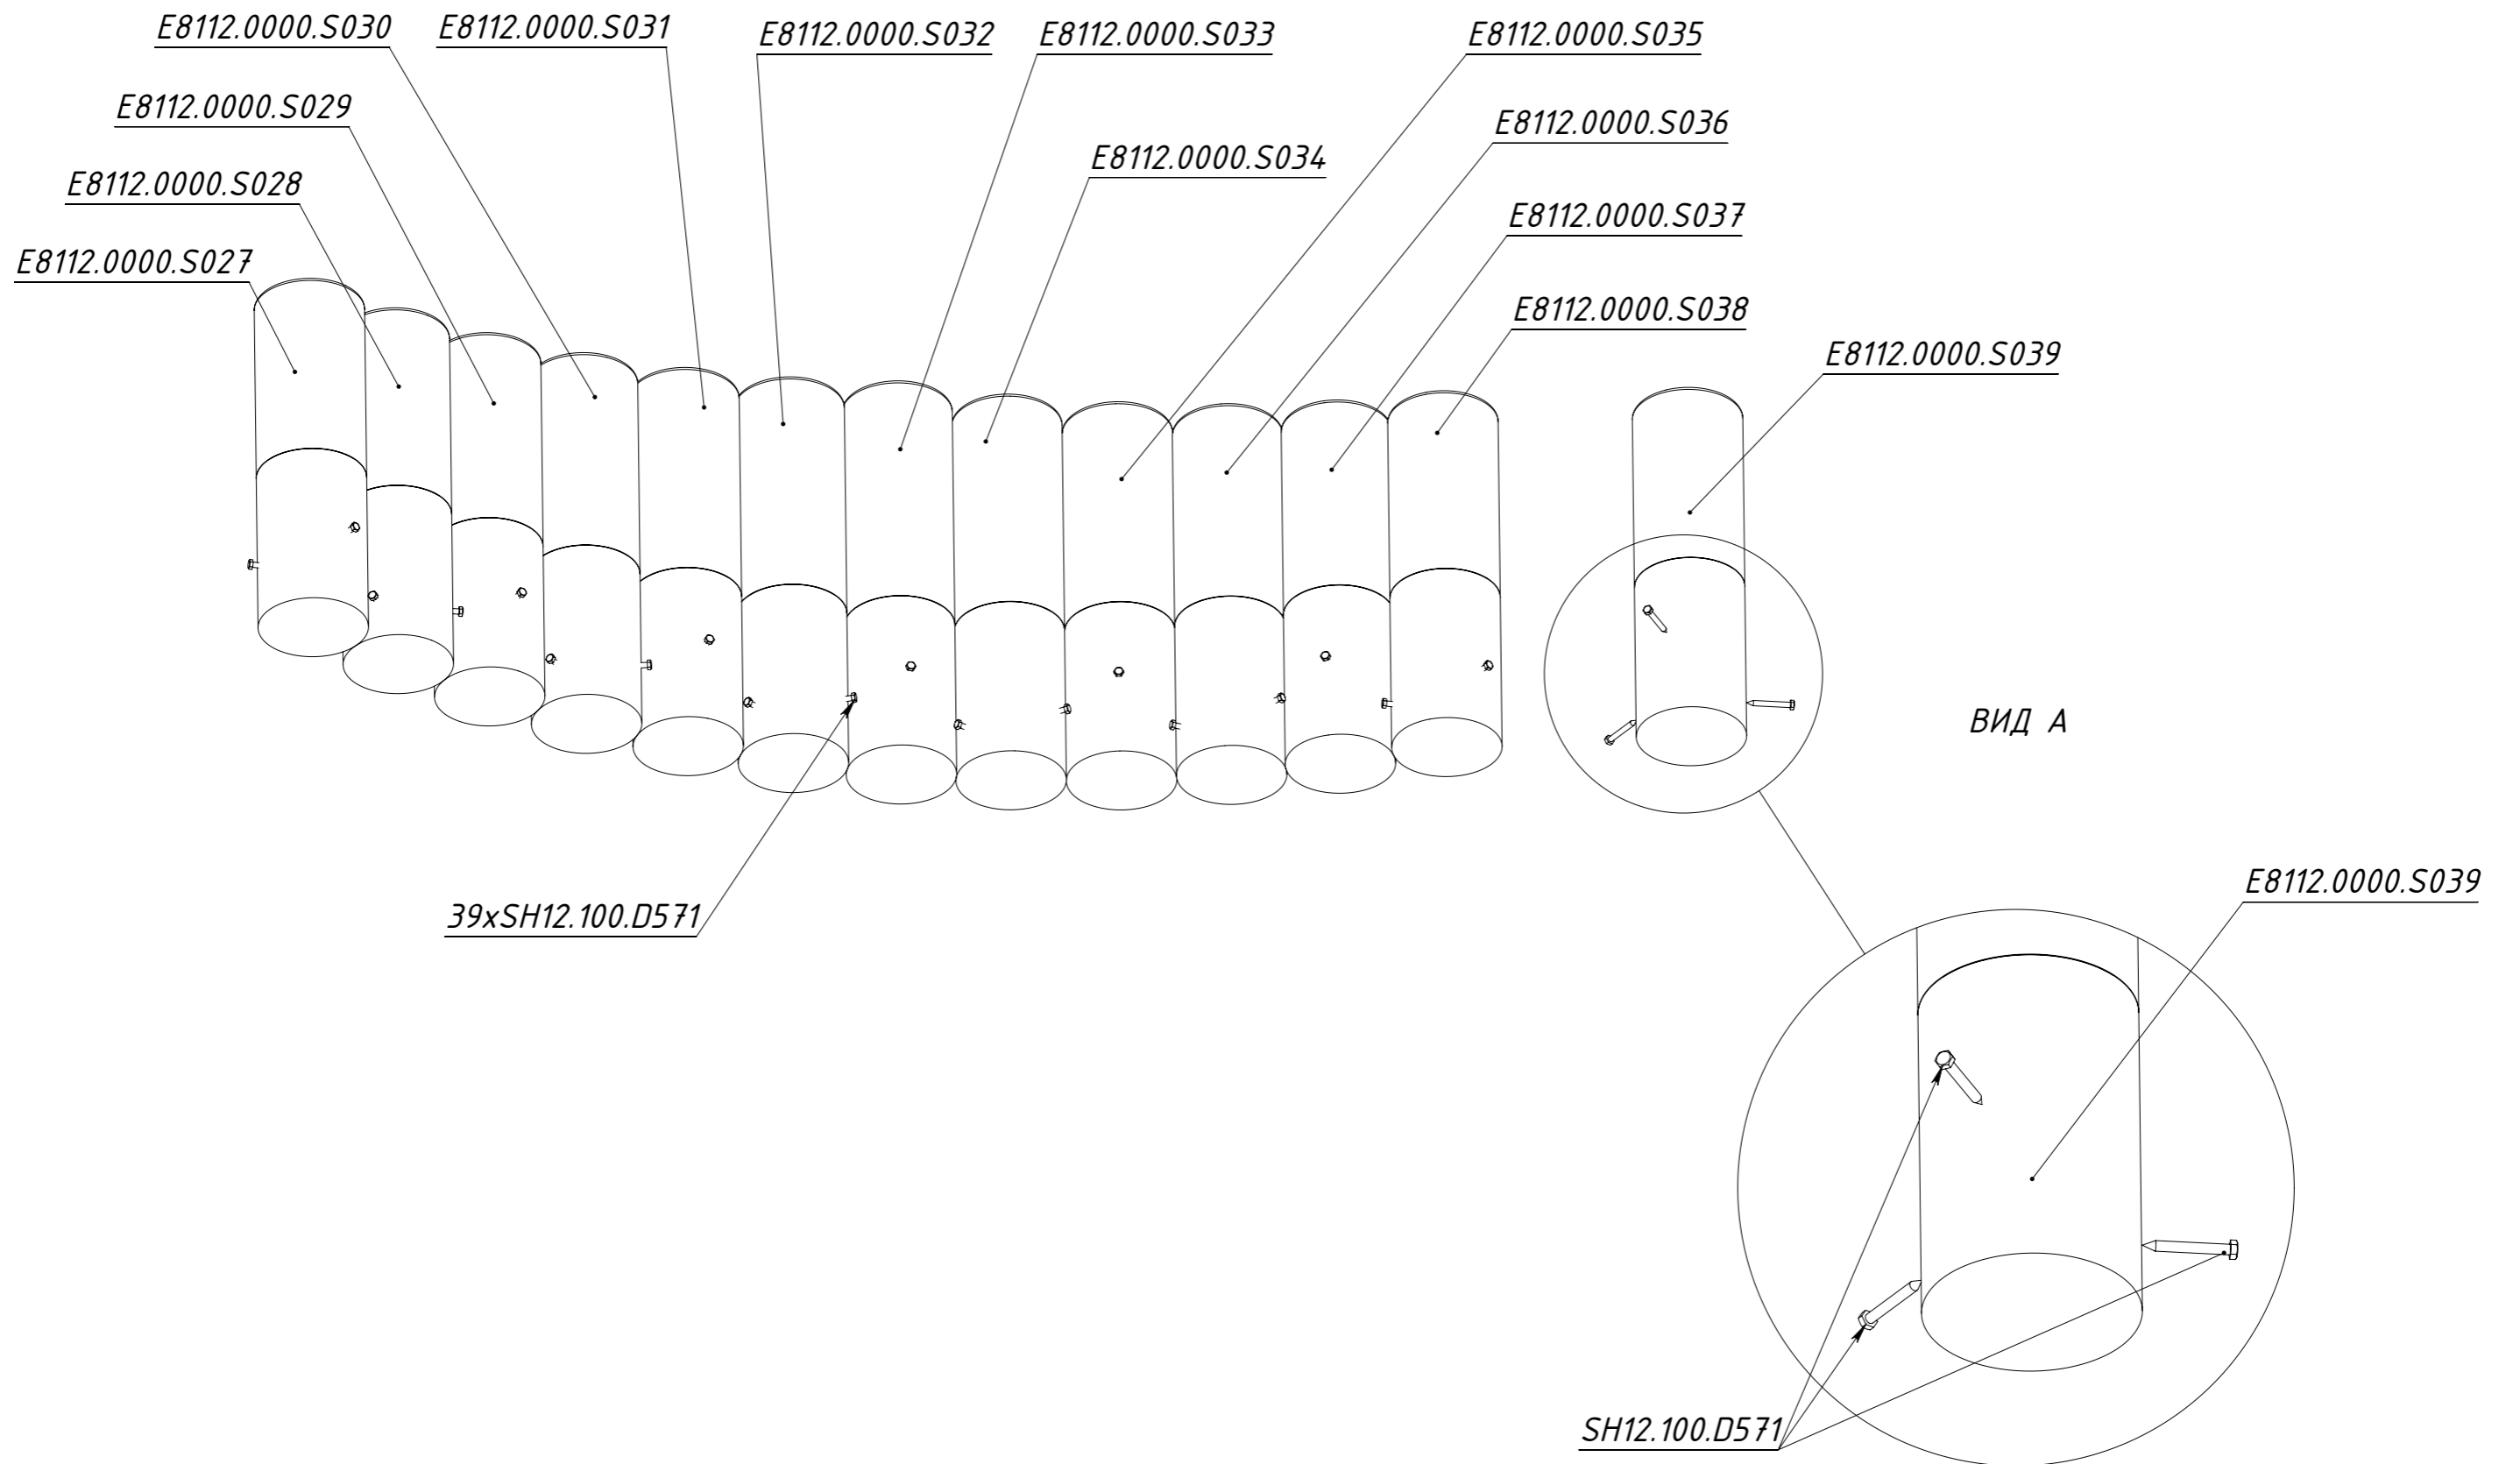


Рисунок 2